

IMPORTANT handling tips for PRESSWOOD pallets

SET FORK WIDTH



Set the span of the forks to a maximum width of 560mm.

KEEP DRY



Keeping pallets dry will result in optimum performance & minimal tare weight.

TO SEPARATE



To split a stack tilt mast forwards and drive in slowly. Avoid taking more than 50% of the stack.

LIFTING



Lift load clear of floor. Do not push or slide.

BLOCK-STACKING



When block-stacking bagged or fragile products use a separator or slip-sheet.

PALLETISING



Like all pallets, pack products brick-style to maintain stability.

POINT LOADING



Avoid point-loading. A person weighing 80kg standing (still) on a pallet is the equivalent of a 1.6 tonne load on a full-size pallet.

RACKING



Presswood pallets should not be used unsupported in open beam racking. Either use support bars or 'slave pallets'.